 


CarScan[®] Code Reader

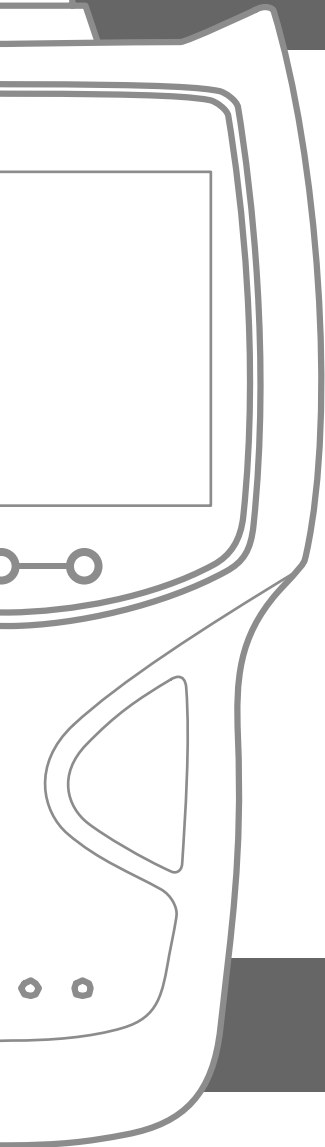

**OWNER'S
MANUAL**

Table of Contents

SAFETY FIRST!	1
ABOUT THE CODE READER	
CONTROLS AND INDICATORS	2
DISPLAY FUNCTIONS	3
USING THE CODE READER	
CODE RETRIEVAL PROCEDURE	5
CHECKING THE FIRMWARE VERSION	7
ERASING DIAGNOSTIC TROUBLE CODES (DTCs)	7
WARRANTY AND SERVICING	
LIMITED ONE YEAR WARRANTY	9
SERVICE PROCEDURES	9

SAFETY FIRST!

This manual describes common test procedures used by experienced service technicians. Many test procedures require precautions to avoid accidents that can result in personal injury, and/or damage to your vehicle or test equipment. Always read your vehicle's service manual and follow its safety precautions before and during any test or service procedure. **ALWAYS** observe the following general safety precautions:



When an engine is running, it produces carbon monoxide, a toxic and poisonous gas. To prevent serious injury or death from carbon monoxide poisoning, operate the vehicle **ONLY** in a **well-ventilated** area.



To protect your eyes from propelled objects as well as hot or caustic liquids, **always** wear **approved** safety eye protection.



When an engine is running, many parts (such as the coolant fan, pulleys, fan belt etc.) turn at high speed. To avoid serious injury, always be aware of moving parts. Keep a safe distance from these parts as well as other potentially moving objects.



Engine parts become very hot when the engine is running. To prevent severe burns, avoid contact with hot engine parts.



Before starting an engine for testing or troubleshooting, make sure the parking brake is engaged. Put the transmission in **park** (for automatic transmission) or **neutral** (for manual transmission). Block the drive wheels with suitable blocks.



Connecting or disconnecting test equipment when the ignition is **ON** can damage test equipment and the vehicle's electronic components. Turn the ignition **OFF** before connecting the Code Reader to or disconnecting the Code Reader from the vehicle's Data Link Connector (DLC).



To prevent damage to the on-board computer when taking vehicle electrical measurements, always use a digital multimeter with at least 10 megOhms of impedance.



The vehicle's battery produces highly flammable hydrogen gas. To prevent an explosion, keep all sparks, heated items and open flames away from the battery.



Don't wear loose clothing or jewelry when working on an engine. Loose clothing can become caught in the fan, pulleys, belts, etc. Jewelry is highly conductive, and can cause a severe burn if it makes contact between a power source and ground.

CONTROLS AND INDICATORS

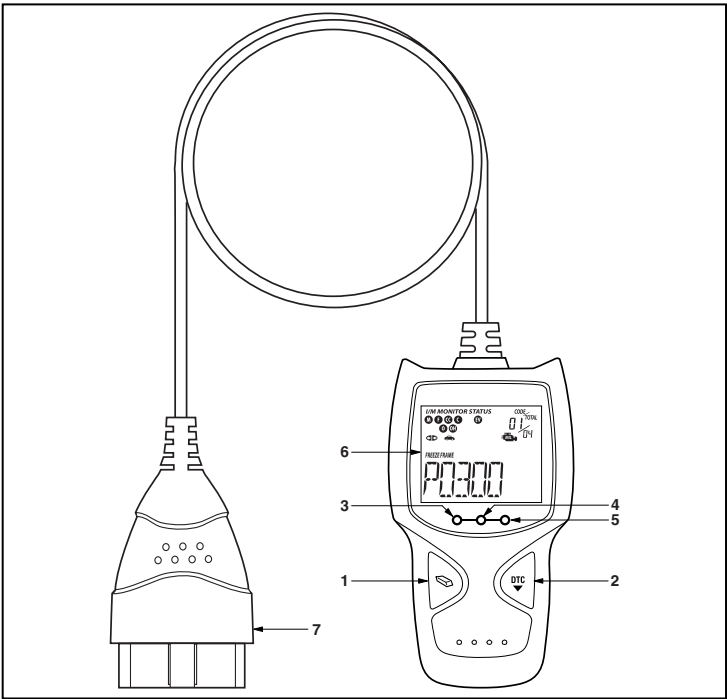 


Figure 1. Controls and Indicators

See Figure 1 for the locations of items 1 through 7, below.

1. **ERASE button** - Erases Diagnostic Trouble Codes (DTCs) and "Freeze Frame" data from your vehicle's computer, and resets Monitor status.
2. **DTC button** - Scrolls the LCD display to view DTCs when more than one DTC is present.
3. **GREEN LED** - Indicates that all engine systems are running normally (all Monitors on the vehicle are active and performing their diagnostic testing, and no DTCs are present).
4. **YELLOW LED** - Indicates there is a possible problem. A "Pending" DTC is present and/or some of the vehicle's emission monitors have not run their diagnostic testing.

- RED LED** - Indicates there is a problem in one or more of the vehicle's systems. The red LED is also used to show that DTC(s) are present. DTCs are shown on the Car Reader's LCD display. In this case, the Malfunction Indicator ("Check Engine") lamp on the vehicle's instrument panel will light steady on.
- LCD Display** - Displays test results, Code Reader functions and Monitor status information. See DISPLAY FUNCTIONS, below, for details.
- CABLE** - Connects the Code Reader to the vehicle's Data Link Connector (DLC).

DISPLAY FUNCTIONS

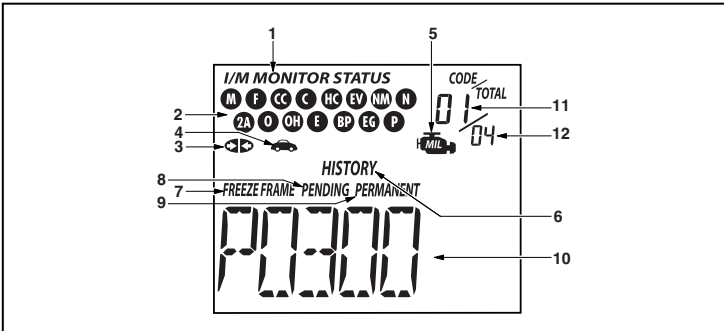




Figure 2. Display Functions

See Figure 2 for the locations of items 1 through 15 below.

 - I/M MONITOR STATUS field** - Identifies the I/M Monitor status area.
- Monitor icons** - Indicate which Monitors are supported by the vehicle under test, and whether or not the associated Monitor has run its diagnostic testing (Monitor status). When a Monitor icon is solid green, it indicates that the associated Monitor has completed its diagnostic testing. When a Monitor icon is flashing red, it indicates that the vehicle supports the associated Monitor, but the Monitor has not yet run its diagnostic testing.



The I/M Monitor Status icons are associated with INSPECTION and MAINTENANCE (I/M) READINESS STATUS. Some states require that all vehicle Monitors have run and completed their diagnostic testing before a vehicle can be tested for Emissions (Smog Check). A maximum of fifteen Monitors are used on OBD2 systems. Not all vehicles support all fifteen Monitors. When the Diagnostic Tool is linked to a vehicle, only the icons for Monitors that are supported by the vehicle under test are visible on the display.

- 3.  Link icon** - Indicates whether or not the Code Reader is communicating (linked) with the vehicle's on-board computers. When visible, the Code Reader is communicating with the computers. If the Link icon is not visible, the Code Reader is not communicating with the computers.
- 4.  Vehicle icon** - Indicates whether or not the Code Reader is being properly powered through the vehicle's Data Link Connector (DLC). A visible icon indicates that the Code Reader is being powered through the vehicle's DLC connector.
- 5. MIL icon** - Indicates the status of the Malfunction Indicator Lamp (MIL). The MIL icon is visible only when a DTC has commanded the MIL on the vehicle's dashboard to light.
- 6. HISTORY icon** - Indicates the currently displayed DTC is a "History" code.
- 7. FREEZE FRAME icon** - Indicates that "Freeze Frame" data has been stored in the vehicle's computer for the currently displayed DTC.
- 8. PENDING icon** - Indicates the currently displayed DTC is a "Pending" code.
- 9. PERMANENT icon** - Indicates the currently displayed DTC is a "Permanent" code.
- 10. DTC Display Area** - Displays the Diagnostic Trouble Code (DTC) number. Each fault is assigned a code number that is specific to that fault.
- 11. Code Number Sequence** - The Code Reader assigns a sequence number to each DTC that is present in the computer's memory, starting with "01." This helps keep track of the number of DTCs present in the computer's memory. Code number "01" is always the highest priority code, and the one for which "Freeze Frame" data has been stored.
- 12. Code Enumerator** - Indicates the total number of codes retrieved from the vehicle's computer.

CODE RETRIEVAL PROCEDURE

Never replace a part based only on the DTC definition. Each DTC has a set of testing procedures, instructions and flow charts that must be followed to confirm the location of the problem. This information is found in the vehicle's service manual. Always refer to the vehicle's service manual for detailed testing instructions.

 


Check your vehicle thoroughly before performing any test.




ALWAYS observe safety precautions whenever working on a vehicle. See *Safety Precautions* on page 1 for more information.


1. Turn the ignition off.
2. Locate the vehicle's 16-pin Data Link Connector (DLC).
3. Connect the Code Reader's cable connector to the vehicle's DLC. The cable connector is keyed and will only fit one way.

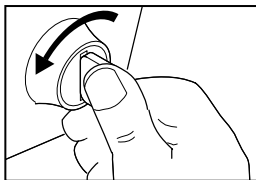


- If you have problems connecting the cable connector to the DLC, rotate the connector 180° and try again.

 If you still have problems, check the DLC on the vehicle and on the Code Reader. Refer to your vehicle's service manual to properly check the vehicle's DLC.

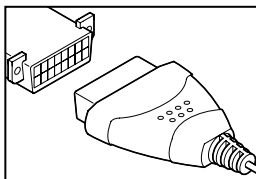

 - After the Code Reader's test connector is properly connected to the vehicle's DLC, the Vehicle icon  should display to confirm a good power connection.
4. Turn the ignition on. **DO NOT** start the engine.
 5. The Code Reader will automatically link to the vehicle's computer.

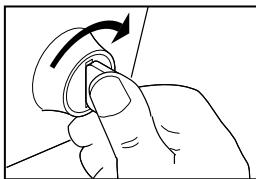


- If the LCD display is blank, it indicates there is no power at the vehicle's DLC. Check your fuse panel and replace any burned-out fuses.

If replacing the fuse(s) does not correct the problem, see your vehicle's repair manual to locate the proper computer (PCM) fuse/circuit. Perform any necessary repairs before continuing.

- After 4-5 seconds, the Code Reader will **retrieve** and **display** any Diagnostic Trouble Codes that are in the vehicle's computer memory.

 - If **Error** is shown on the Code Reader's LCD display, it indicates there is a communication problem. This means that the Code Reader is unable to communicate with the vehicle's computer. Do the following:
 - Turn the ignition key off, wait 5 seconds and turn the key back on to reset the computer.
 - Make sure your vehicle is OBD2 compliant.

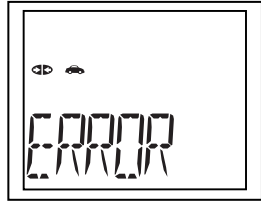


6. Read and interpret the Diagnostic Trouble Codes using the LCD display and the green, yellow and red LEDs.




The green, yellow and red LEDs are used (with the LCD display) as visual aids to make it easier for the user to determine engine system conditions.

 
- **Green LED** - Indicates that all engine systems are "OK" and running normally. All monitors on the vehicle are active and are performing their diagnostic testing, and no trouble codes are present. A zero will show on the Code Reader's LCD display for further confirmation.
- **Yellow LED** - Indicates one of the following conditions:

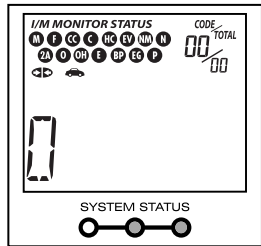

 PENDING CODE PRESENT - If the yellow LED is lit, it may indicate the existence of a pending code. Check the Code Reader's LCD display for confirmation. A pending code is confirmed by the presence of a numeric code and the word PENDING on the Code Reader's LCD display. If no pending code is shown, the yellow LED indicates Monitor Status (see the following).

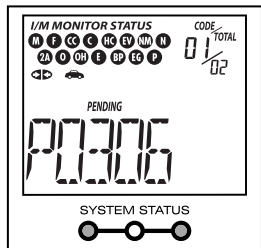


 MONITOR STATUS - If the Code Reader's LCD display shows a zero (indicating there are no DTCs present in the vehicle's computer), but the yellow LED is lit, it indicates a "Monitor Has Not Run" status. This means that some of the Monitors on the vehicle have not yet finished their diagnostic self-testing. This condition is confirmed by one or more **blinking**

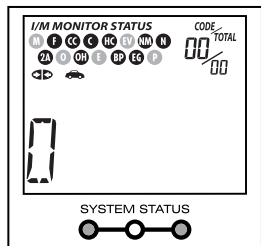

monitor icons on the LCD display. A **blinking** Monitor icon means the Monitor has not yet run and finished its diagnostic self-testing. All Monitor icons that are **solid** have completed their diagnostic self-testing.

 - **Red LED** - Indicates there is a problem with one or more of the vehicle's systems. The red LED is also used to show that DTC(s) are present (displayed on the Code Reader's LCD display). In this case, the Malfunction Indicator (Check Engine) lamp on the vehicle's instrument panel will light steady on.

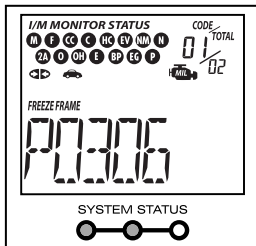

The Code Reader will display a code only if codes are present in the vehicle's computer memory. If no codes are present, a "0" will be displayed.

 
7. If more than one code is present, press and release the **DTC** button, as necessary, to display additional codes.

Visit the manufacturer's website for Fault Code Definitions. Match the retrieved DTC(s) with those listed. Read the associated definition(s), and see the vehicle's service manual for further evaluation.

CHECKING THE FIRMWARE VERSION

You can check the firmware version of your Code Reader.

1. Press and hold the **DTC** button while you connect the Code Reader to the vehicle's DLC.
 - The Firmware Version screen displays.
 - The screen shows the tool's current firmware version.
2. Press the **DTC** button again to exit.

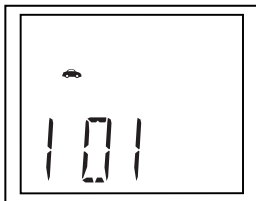

The unit will link to the vehicle and begin the code retrieval process (see CODE RETRIEVAL PROCEDURE on page 5).

ERASING DIAGNOSTIC TROUBLE CODES (DTCs)





When the Code Reader's ERASE function is used to erase the DTCs from the vehicle's on-board computer, "Freeze Frame" data and manufacturer-specific enhanced data are also erased.

 
 
 
If you plan to take the vehicle to a Service Center for repair, **DO NOT** erase the codes from the vehicle's computer. If the codes are erased, valuable information that might help the technician troubleshoot the problem will also be erased.

Erase DTCs from the computer's memory as follows:



When DTCs are erased from the vehicle's computer memory, the I/M Readiness Monitor Status program resets status of all the Monitors to a not run "flashing" condition. To set all of the Monitors to a DONE status, an OBD2 Drive Cycle must be performed. Refer to your vehicle's service manual for information on how to perform an OBD2 Drive Cycle for the vehicle under test.

1. If not connected already, connect the Code Reader to the vehicle's DLC. (If the Code Reader is already connected and linked to the vehicle's computer, proceed directly to step 4. If not, continue to step 2.)
2. Turn the ignition on. **DO NOT** start the engine. The Code Reader will automatically link to the vehicle's computer.
3. Press and release the Code Reader's **ERASE**  button. The LCD display will indicate "SuRE?" for your confirmation.
 - If you change your mind and do not wish to erase the codes, press the **DTC** button to return to the code retrieval function.
 - If you wish to continue, press the **ERASE**  button again. When all retrievable information, including DTCs, has been cleared from the computer's memory, the Code Reader will re-link to the vehicle's computer, and the LCD display will show "0."

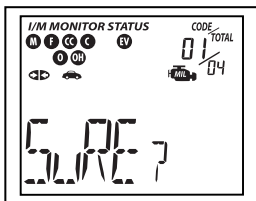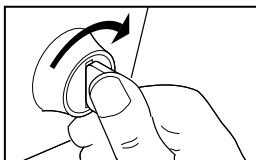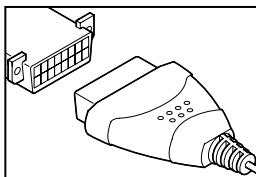

Erasing DTCs does not fix the problem(s) that caused the code(s) to be set. If proper repairs to correct the problem that caused the code(s) to be set are not made, the code(s) will appear again (and the check engine light will illuminate) as soon as the vehicle is driven long enough for its Monitors to complete their testing.

LIMITED ONE YEAR WARRANTY

The Manufacturer warrants to the original purchaser that this unit is free of defects in materials and workmanship under normal use and maintenance for a period of one (1) year from the date of original purchase.

If the unit fails within the one (1) year period, it will be repaired or replaced, at the Manufacturer's option, at no charge, when returned prepaid to the Service Center with Proof of Purchase. The sales receipt may be used for this purpose. Installation labor is not covered under this warranty. All replacement parts, whether new or remanufactured, assume as their warranty period only the remaining time of this warranty.

This warranty does not apply to damage caused by improper use, accident, abuse, improper voltage, service, fire, flood, lightning, or other acts of God, or if the product was altered or repaired by anyone other than the Manufacturer's Service Center.

The Manufacturer, under no circumstances shall be liable for any consequential damages for breach of any written warranty of this unit. This warranty gives you specific legal rights, and you may also have rights, which vary from state to state. This manual is copyrighted with all rights reserved. No portion of this document may be copied or reproduced by any means without the express written permission of the Manufacturer. **THIS WARRANTY IS NOT TRANSFERABLE.** For service, send via U.P.S. (if possible) prepaid to Manufacturer. Allow 3-4 weeks for service/repair.

SERVICE PROCEDURES

If you have any questions, require technical support or information on UPDATES and OPTIONAL ACCESSORIES, please contact your local store, distributor or the Service Center.

USA & Canada:

(800) 544-4124 (6:00 AM-6:00 PM, Monday-Saturday PST)

All others: (714) 241-6802 (6:00 AM-6:00 PM, Monday- Saturday PST)

 
FAX: (714) 241-3979 (24 hr.)

Web: www.Innova.com



TECHNICAL ASSISTANCE
1 800 544 4124
HABLAMOS ESPAÑOL • SERVICE IN THE USA
ASE CERTIFIED TECHNICIANS

INNOVA.COM

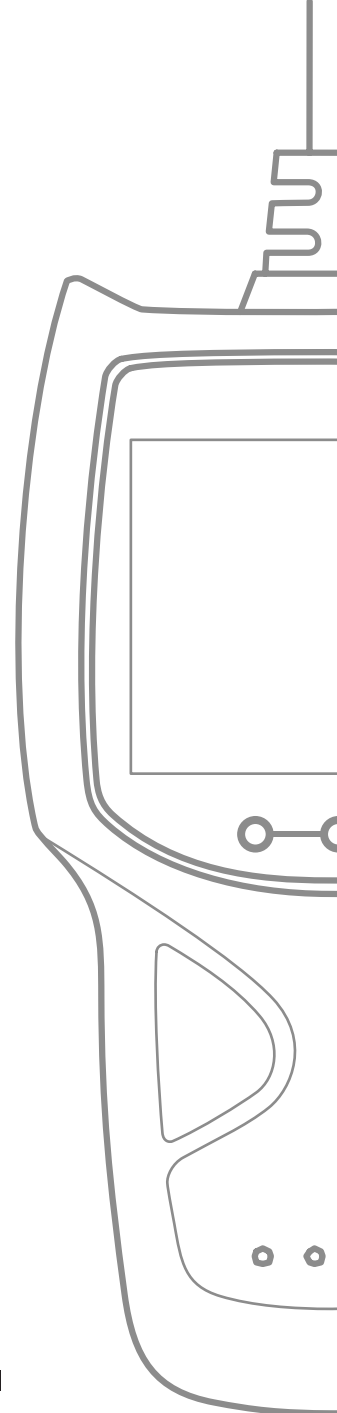

INNOVA
Innova Electronics Corp.
17352 Von Karman Ave.
Irvine, CA 92614

