

# Thermal Imager



## OWNER'S MANUAL

**3360**

# Table of Contents

<b>QUICK USE GUIDE</b>	
GENERAL OPERATION STEPS .....	1
INSTRUMENT POWER SUPPLY .....	1
INFRARED THERMAL IMAGING DISPLAY INFORMATION .....	2
<b>ABSTRACT</b> .....	3
<b>CHARACTERISTIC</b> .....	3
<b>TECHNICAL INDICATORS</b> .....	4
<b>SKETCH MAP</b> .....	5
<b>POWER SUPPLY</b> .....	6
<b>BUTTON OPERATION</b> .....	7
<b>SETTINGS MENU</b>	
EMISSIVITY ADJUSTMENT .....	8
UNIT SETTINGS .....	9
LIMIT VALUE SETTING .....	10
COLOR TABLE OPTIONS .....	10
DATE AND TIME .....	11
STORAGE .....	11
ALARM .....	13
BACKLIGHT ADJUSTMENT .....	15
FUSION DISTANCE .....	15
LANGUAGE SELECTION .....	16
INFORMATION .....	17
<b>PRECAUTIONS</b> .....	17
<b>SYSTEM UPGRADE AND AFTER SALES SUPPORT</b> .....	18
<b>ADDENDUM</b>	
EMISSIVITY .....	18
EMISSIVITY TABLE .....	19
<b>BATTERY INSTALLATION</b> .....	20

## GENERAL OPERATION STEPS

- 1. Long Press "Back/Power" button for 3 seconds -**  
Instrument will switched on, the screen will display the boot screen, and the thermal image will appear after the boot screen appeared.
- 2. Put the Thermal Imager points to target area or object and check thermal image -**  
The relative temperature is shown from hot to cold through the color table (corresponding to light to dark). The infrared temperature reading (shown above the thermal image) indicates the temperature of the target measuring point aimed at the cross cursor on the display screen.
- 3. Press the "UP" button or press the "DOWN" button**  
The fusion ratio of infrared and visible light can be adjusted.
- 4. Press the trigger button -**  
The display screen stops, showing the thermal image at the moment, and the thermal image will be surrounded by white boxes .
- 5. After image capture, press "OK" button to save the captured thermal image -**  
The thermal image is stored in the internal storage of the instrument in the form of pictures. The thermal image can be viewed through USB. Press the return button to continue to scan the target area or object.
- 6. In the process of scanning the area or object at which the lens is aligned, press "OK" button can enter menu options -**  
In menu options can set various parameters and view meter information (see 8. Setting menu). Press "Back/Power" button can exit the menu.

## INSTRUMENT POWER SUPPLY


The instrument power supply mode is AAA (No.7 ) alkaline batteries, use three alkaline dry cells to make the instrument work.

Long press "Back/Power" button 3s starting up, power off is also long press "Back/Power" button 3s.

# Quick Use Guide

## Infrared Thermal Imaging Display Information

1. Emissivity
2. Time
3. Battery Capacity
4. Center Temperature
5. Target Temperature
6. Color Bar
7. Minimum Temperature Position
8. Maximum Temperature Position
9. Maximum Temperature
10. Minimum Temperature

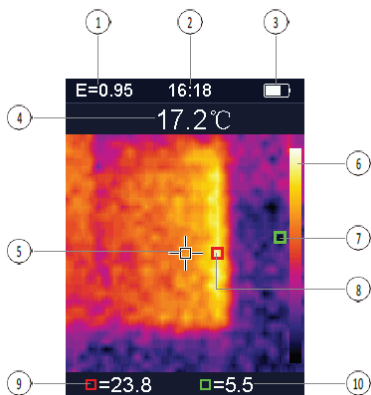

**ABSTRACT**

The device is a professional thermometer, the instrument adopts 32 x 32 pixels of thermal imaging sensors and a 30w pixels of photoelectric sensors, in addition with a 2.0" TFT LCD color display.

Combined with infrared thermal imaging and temperature sensor and optical sensor images of auxiliary, able to provide a rapid, simple and accurate for most of the surface temperature of detection, the location of the specific and clear understanding of the object surface temperature.

At the same time, the instrument can also store the thermal image images at a certain time, and the image information can be viewed through the computer connection, so as to facilitate the analysis of thermal images in the later period.

**CHARACTERISTICS**

- 2.0 inch 240 x 320 TFT LCD display.
- 32 x 32 pixel infrared sensor.
- Image capture frequency 7Hz.
- Thermal sensitive(NETD) <math>\sim</math>254mK.
- Cold hot spot automatic capture.
- Visible camera and image storage(BMP).
- Internal memory stores images and can store more than 100pcs.
- Set the time and date and adjust the emissivity.
- 3 x "AAA" alkaline battery power supply.
- USB interface connect the computer to check the photo.
- IP54 waterproof level

# TECHNICAL INDICATORS

## TEMPERATURE

Temperature Range .....	-20 to 600°C (-4 to 1112°F)
Temperature Measurement Accuracy .	±2% ±2°C (±3.6°F) as tested at 25°C (77°F)
Screen Shot Rate Correction .....	Yes

## IMAGE PERFORMANCE

Image Capture Frequency .....	7Hz
Sensor Type .....	Non-refrigerating heat release point
Thermal Sensitive(netd) .....	254mk
Infrared Band .....	8 to 14µm
Visible Camera .....	307200 Pixel
Field of View .....	33° x 33°
The Focal Length .....	Fixed focal length

## IMAGE DISPLAY MODE

Color Table .....	Iron Red, Color Red, Grayscale (White Heat), Grayscale (Black Heat)
Level and Span .....	Automatic


## FUSION INFORMATION

Visible and Infrared Fusion Distance .	0.5m, 1.0m, 2.0m
View Options .....	50% Step
Hot Spot and Cold Spot Tracking .....	Yes



## IMAGE CAPTURE AND STORAGE

Tacking Pictures .....	Yes
Storage Medium .....	Internal flash storage can store over 100 pieces
Document Format .....	BMP
Memory Viewing .....	View or delete stored photos from the menu
Operating Temperature .....	0 to 50°C (32 to 122°F)
Storage Temperature .....	-20 to 60°C (-4 to 140°F)
Relative Humidity .....	10% to 90% non-dewfall
Display Screen .....	2.0 inch, 240 x 320 TFT LCD
Waterproofing Grade .....	IP54

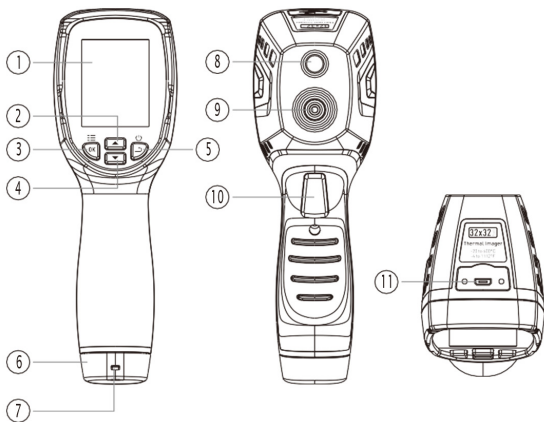1. LCD Display Screen
2. Up Button
3. Confirm/Menu Button
4. Back/Power Button
5. Down Button
6. Battery Cover
7. Lanyard Hole
8. Visible Light
9. Infrared Sensor
10. Trigger Button (HOLD Key)
11. Micro USB Interface



## POWER SUPPLY

- Long press “Back/Power  ” button 3 second to open or turn off the Thermal Image device.
- This device is powered by 3pcs “AAA” batteries, when the battery is full, the battery status icon in the upper right corner of the display shows full white full size “  ”.
- As the battery charge decreases, the white portion of the battery icon also drops.
- When the battery symbol is displayed in red, the battery level is low, you should replace the new one immediately.
- If the battery with insufficient battery is not replaced in time, the measured temperature reading may be inaccurate.
- APO-Automatic Shutdown: The Thermal Image device will automatically shut down after a period of inactivity, and the meter default APO time is 10 minutes.



Except HOLD button, the Thermal Image device has four control buttons on the button of the display screen.

**Tip: Use the thumb button to control the trigger with the index finger**

## 1. Back/Power Button “”

- Long press: Repeatedly open turn off the meter power.
- Short press: Exit menu option or drop storage photos.

## 2. Confirm/Menu Button “OK”

- Short press: Enter menu options, determine change parameters, confirm to save photos or delete images (Preview photos).


## 3. Up and Down Buttons “”

- Short press: Scroll through the options in the setup menu and scroll through the saved photos in image review mode. In measurement mode, scroll up and down the navigation buttons to see a blend of visible and infrared thermal images in different proportions.
- Long press: In the settings menu option, long press the up and down navigation buttons can add or subtract values continuously, for example, when adjusting the emissivity, press and hold for a long time, the emissivity value will increase continuously, and the same goes down

## 4. HOLD Button

- Pressing the Trigger key (Also called the HOLD key) the displays still motion, holding the infrared thermal image or visible light image at this moment.
- Press the Trigger key again, the display will show the area or object that the infrared scans at this time.
- This cycle repeats.

## 5. Taking Pictures and Saving Pictures

- This meter can hold at least 100 photos in internal memory.
1. The instrument is aimed at the area or target object to be measured
  2. Press the Trigger key (HOLD Button), the screen image is still.
  3. Press “Confirm/Menu OK” Button, to save the current photo, a progress bar below the picture shows the progress of the picture saved
  4. Press the “Back/Power ” Button, to cancel the save photo, return to continue scanning the target object.


In scan measurement mode, press the "Confirm/Menu OK" Button, to enter the settings menu overview, as shown below:



- The yellow highlight bar in the menu option corresponds to the selected option, press "Up ▲" and "Down ▼" Button scroll highlight bar
- Press "Confirm/Menu OK" Button enter the corresponding options, each option is described in detail as follows:

## EMISSIVITY ADJUSTMENT

- For the definition of emissivity, please refer to Appendix 11 for details.
- After entering the emissivity option, the interface is as shown below:

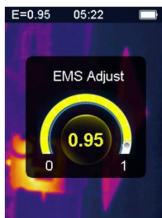

1. Press the "Up ▲" Button, the emissivity will increase; long press will increase continuously.
2. Press the "Down ▼" Button, the emissivity will decrease;
3. Long press will continuously decrease.
4. Press the "Confirm/Menu OK" Button, Confirm to change current emissivity and exit emissivity adjustment interface.

# SETTINGS MENU




## Unit Settings

5. Press the "Back/Power  " Button, to exit the emissivity setting interface, the emissivity value is not modified.

### UNIT SETTINGS


- Unit settings can be set to different unit displays.
- After entering the unit options, the interface is as shown below:



1. Press the "Up  " Button, the yellow highlight bar moves to another option.
2. Press the "Down  " Button, the yellow highlight bar moves to another option.
3. Press the "Confirm/Menu OK" Button, to confirm to change current temperature unit and exit unit setting interface.
4. Press "Back/Power  " Button, to exit the unit setting interface and the unit will not be modified.

### LIMIT VALUE SETTING

- After entering the Limit Value option, the interface is as shown below:

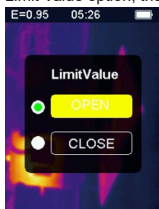

1. Press the "Up ▲" Button, the yellow highlight bar moves to another option.
2. Press the "Down ▼" Button, and the yellow highlight bar moves to another option.
3. Press the "Confirm/Menu OK" Button, confirm the change of the current Limit Value to turn on the light and exit the Limit Value setting interface.
4. Press the "Back/Power ↶" Button, to exit the Limit Value switch setting interface, the Limit Value switch is not modified.

### COLOR TABLE OPTIONS


- After entering the color table option, the interface is as shown below:



1. Press the "Up ▲" Button, and the yellow highlight bar moves up.
2. Press the "Down ▼" Button, and the yellow highlight bar moves down.
3. Press the "Confirm/Menu OK" Button, to confirm changing the current color bar and exit the color table setting screen.


# SETTINGS MENU


 

## Date and Time

4. Press "Back/Power  " Button, to exit the color table setting interface, the color table display will not be modified.

### DATE AND TIME


- After entering the date and time option, the interface is as shown below:

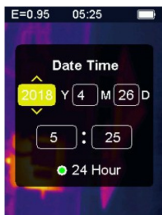


1. The yellow highlight bar corresponds to that option, and correspondingly changes the value in that option.
2. Press the "Up  " Button, and the corresponding number will increase.
3. Press the "Down  " Button, and the corresponding number will decrease.
4. Press the "Confirm/Menu OK" Button, the yellow highlight bar will jump to different items in sequence.
5. Press the "Back/Power  " Button, to exit the date and time setting interface and save the current set time and date.

### STORAGE

- After entering the storage options, the interface is as shown below:

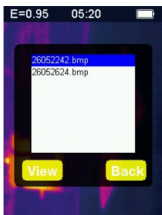


- Highlight the selected picture, as shown below:

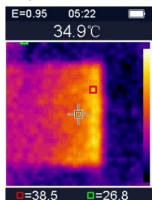


1. The white box shows the picture stored in the internal memory of the meter.
2. Press the "Up ▲" Button, the blue highlight bar will move up.
3. Press the "Down ▼" Button, and the blue highlight bar moves down.
4. Press the "Back/Power ↶" Button, to exit the storage interface.
5. Press the "Confirm/Menu OK" Button, to enter the picture preview interface, displaying the current blue.

- Delete the picture, as shown in the following figure:

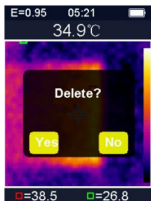





1. Press the "Up ▲" Button, to display the previous picture.
2. Press the "Down ▼" Button, to display the next picture.
3. Press the "Back/Power ↶" Button, to return to the storage interface.
4. Press the "Confirm/Menu OK" Button, to pop up the confirmation window to delete the picture.

5. Press the "Confirm/Menu OK" Button, select "Yes" to confirm the deletion of the picture, and that the window is closed automatically and the next saved picture is displayed.
6. Press the "Back/Power"  Button, and select "No" to cancel deleting the picture, Confirm that the window is automatically closed.

### ALARM

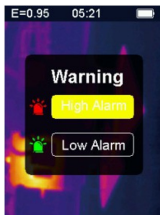
- After entering the alarm options, the interface is as shown below:




1. Press the "Up"  Button, the yellow highlight bar moves to another option.
2. Press the "Down"  Button, and the yellow highlight bar moves to another option.
3. Press the "Back/Power"  Button, to exit the alarm setting interface.
4. Press the "Confirm/Menu OK" Button, to enter the corresponding high Alarm/Low alarm interface according to the highlight selection bar.

- If you select the high alarm option, enter the high alarm interface as shown below:



1. Press the "Up ▲" Button, the high temperature alarm threshold will increase; long press can increase continuously
  2. Press the "Down ▼" Button, the high temperature alarm threshold will decrease; long press can reduce continuously.
  3. Press the "Confirm/Menu OK" Button, to open or close the start button "  ".
  4. Open this button to indicate that if the measured object is higher than the set maximum temperature threshold, the instrument will have an alarm sound; if it is closed, no alarm will sound.
  5. Press the "Back/Power ↶" Button, to exit the high alarm interface and return to the alarm options interface.
- If you select the low alarm option, enter the low alarm interface as shown below:



1. Press the "Up ▲" Button, to increase the threshold for low temperature alarms; press and hold to increase continuously.
2. Press the "Down ▼" Button, and the threshold for low temperature alarms will decrease; long presses will reduce them continuously.
3. Press the "Confirm/Menu OK" Button, to open or close the start button "  ".
4. If this button is turned on, it indicates that if the measured object is higher than the set minimum temperature threshold, the instrument will have an alarm sound; if it is closed, no alarm will sound.




# SETTINGS MENU

## Backlight Adjustment

### BACKLIGHT ADJUSTMENT


- After entering the backlight adjustment options, the interface is as shown below:

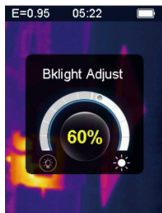

1. Press the "Up ▲" Button, to increase the brightness of the display backlight; long press can increase continuously.
2. Press the "Down ▼" Button, the display backlight brightness will decrease; long press can continuously reduce.
3. Press the "Confirm/Menu OK" Button, to confirm changing the current backlight brightness and exit the backlight adjustment screen.
4. Press the "Back/Power ↶" Button, to not change the backlight brightness and exit the backlight adjustment interface.

### FUSION DISTANCE


- By using aligned visible images and infrared images, image fusion makes it easier to understand infrared images.
- The product captures a visual image with each infrared image to accurately display the target area and share it more effectively with others.
- After entering the fused distance option, the interface is as shown below:

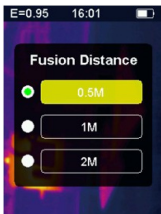

1. Press the "Up ▲" Button, and the yellow highlight bar moves up.
2. Press the "Down ▼" Button, and the yellow highlight bar moves down.
3. Press the "Confirm/Menu OK" Button, to confirm changing the fusion distance corresponding to the current color bar and exit the Fusion distance setting interface.
4. Press the "Back/Power ↶" Button, to exit the fused distance setting interface and the fusion distance will not be modified.

### LANGUAGE SELECTION

- This setting can set the meter to display in different national languages.
- Enter the language selection option, and the interface is as shown in the figure below:

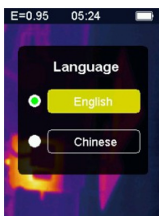

1. Press the "Up ▲" Button, the yellow highlight bar moves to another option.
2. Press the "Down ▼" Button, and the yellow highlight bar moves to another option.
3. Press the "Confirm/Menu OK" Button, and confirm to change the language of the current highlight bar and exit the language setting interface.
4. Press the "Back/Power ↶" Button, to exit the language selection setting interface, the language selection is not modified.

# SETTINGS MENU

## Information

### INFORMATION

- This option shows the factory information, version number, etc. of the instrument.
- Enter the information options, the interface is as shown below:



<b>Model</b>	Model of Instrument
<b>SN</b>	Serial Number of Instrument
<b>Version</b>	Version Number
<b>Release Date</b>	Factory Date

- Press the "Back/Power"  " Button, to exit the information display interface.

### PRECAUTIONS

- When using this product, ensure that the temperature is close to room temperature.
- Micro USB on the device can be connected to a computer via a USB cable, the computer can view the photos which is saved in the meter.
- For instrument temperature calibration, the instrument has been factory calibrated before the shipment. If you need to calibrate, please contact your local after-sales dealer.
- Pay attention to the cleanliness of the surface of the instrument. Wipe the case with a damp cloth if necessary.
- Use a high-quality lens wipe to remove dust or stains from the meter's lens and display window.
- Do not use abrasives or solvents to clean the case, lens, or display window.

## SYSTEM UPGRADE AND AFTER SALES SUPPORT

- Concerned about the company's dynamic information, the first time you can understand the latest upgrade information about firmware.
- If there is firmware's update information, contact your local after-sales dealer to upgrade the firmware.

## ADDENDUM EMISSIVITY

- The emissivity indicates the energy radiation characteristics of the material.
- The emissivity of most organic materials and painted or oxidized surfaces is approximately 0.95, which is the default setting of the thermometer.
- All objects radiate infrared energy, the amount of energy radiation is based on the actual surface temperature of the object and the surface emissivity.
- The product perceives the infrared energy at the surface of the object and uses this data to calculate the estimated temperature value.
- Many common objects and materials (such as painted metal, wood, water, skin, fabrics, etc.) can effectively emit energy, so it is easy to obtain relatively accurate measurements, for surfaces that emit energy easily (High emissivity), the emissivity is more than 90% (0.90).
- This simplified approach does not apply to glossy surfaces or painted metals because their emissivity is less than 60% (0.60), these materials are not easy to emit energy and are classified as low emissivity materials, in order to measure materials with lower emissivity more accurately, emissivity corrections are required.
- Adjusting the emission value usually allows the product to more accurately calculate the actual temperature estimate.


**Notice:** It is difficult to determine the actual temperature of the surface with an emissivity below 0.60 accurately and consistently, even if the emissivity and the reflection background are adjusted correctly, the lower the emissivity, the greater the possible error in the product's calculation of temperature measurement results.

# ADDENDUM

## Emissivity Table

SUBSTANCE	EMISSIVITY
Pitch .....	0.90 to 0.98
Concrete .....	0.94
Cement .....	0.96
Sand .....	0.90
Soil .....	0.92 to 0.96
Water .....	0.92 to 0.96
Ice .....	0.96 to 0.98
Snow .....	0.83
Glass .....	0.90 to 0.95
Ceramics .....	0.90 to 0.94
Marble .....	0.94
Plaster .....	0.80 to 0.90
Stucco .....	0.89 to 0.91
Brick .....	0.93 to 0.96
Cloth (Black) .....	0.98
Human Skin .....	0.98
Soap Bubble .....	0.75 to 0.80
Charcoal (Powder) .....	0.96
Lacquerware .....	0.80 to 0.95
Lacquerware (Matte) .....	0.97
Rubber (Black) .....	0.94
Plastic .....	0.85 to 0.95
Wood .....	0.90
Paper .....	0.70 to 0.94
Chromium Oxide .....	0.81
Copper Oxide .....	0.78
Iron Oxide .....	0.78 to 0.82
Textile .....	0.90

# BATTERY INSTALLATION

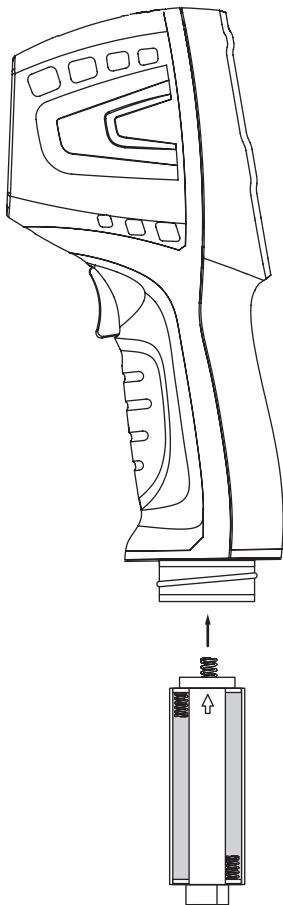

## BATTERY INSTALLATION

- Battery pack must be installed in correct orientation.
- Look for arrow on battery pack for direction of insertion.





# INNOVA<sup>®</sup>

Innova Electronics Corp.  
17352 Von Karman Ave.  
Irvine, CA 92614

MRP 93-1138 REV A

Copyright © 2021 IEC. All Rights Reserved

